



Multi Variable Sensor

Technical / Operations

Manual

V2016.08.21

ACC-CLMT-XX



For more information on our products visit www.accutroninstruments.com
Contact us by email: info@accutroninstruments.com
Or by phone: 705-682-0814



IMPORTANT NOTICE

The Climatrax family of instruments is the exclusive copyright properties of Accutron Instruments Inc.

Accutron Instruments Inc. reserves the right to make changes to the Accutron products and manuals without further notice to improve reliability, function or design. Accutron Instruments Inc. does not assume any liability arising out of the application or use of any product described herein, nor does it convey any license under its patent rights, nor the rights of others.

The documentation supplied is for the purpose of furnishing users of Accutron products with technical information on how to install, use, and maintain the various instruments. It is forbidden to use any Accutron documentation for any other purpose that may be detrimental to the interests of Accutron Instruments Inc.



Table of Contents

SECTION 1-GENERAL INFORMATION

The Manual	3
Safety Guidelines	4
Information about Your System	4
Climatrax Specifications	5

SECTION 2-INSTALLATION

Choosing a Location	6
Wiring the Unit	6

SECTION 3-PROGRAMMING

Description of Buttons	7
Climatrax Flow Chart	8
Flow Chart Description/Information.....	9

SECTION 4-MODBUS

Wiring Modbus	11
Setting Modbus Address	11
Modbus Registers.....	13

SECTION 5-TROUBLESHOOTING

FAQ (Frequently Asked Questions)	14
--	----

APPENDIX A

Glossary	15
----------------	----

APPENDIX B-DIAGRAMS

Climatrax Diagrams	16
Accutron Climatrax Part Number Creator	20
Sensor Information.....	21



Section 1 – General Information

The Manual

Refer to this manual for proper installation, operation and maintenance of the Climatrax Instrument.

Special attention must be paid to warnings and notices highlighted from the rest of the text by gray boxes.

Warning: failure to observe the necessary precautions can result in death, serious injury, and/or considerable material damage.

Note: important information about the actual product or specific part of the operating manual.

- These instructions do not claim to cover all details or variations in equipment, or to provide for every possible contingency that may arise during installation, operation, or maintenance.
- For further information or to resolve issues not covered in the manual, consult your Accutron representative.
- The contents of the manual shall not become part of or modify any prior or existing agreement, commitment or relationship. The Sales contract contains the entire obligation of Accutron Instruments Inc. The warranty contained in the contract between the parties is the sole warranty of Accutron Instruments Inc.

IMPORTANT: All specifications are subject to change without notice. Please ensure that any safety-related information is confirmed with a qualified Accutron Instruments representative.



Safety Guidelines

This device/system should only be set up and operated in conjunction with this manual. Qualified personnel are only authorized to install and operate this equipment in accordance with established safety practices and standards.

Warning: This product can only function properly and safely if it is correctly transported, stored, installed, set up, operated, and maintained.

Note: Always use product in accordance with specifications.

Information about Your System

When you first receive the Climatrax unit, be sure to record the following:

Model Number (located behind cover) _____

Serial Number (located behind cover) _____

Code Version (displayed on startup) _____

Note: If you need to contact Customer Service, this information will be beneficial to have.



Climatrax Specifications

Display Readout: 2 x16 Backlit LCD display.
Each digit is 4.99mm (H) X 2.55mm (W)

Power Input: 12VDC to 30VDC
20VDC to 30VDC with optional relay output

Power Consumption: 70mA, 130mA with all four 4-20mA connected and outputting 20mA

Output type: Four self-powered 4-20mA outputs, Modbus RS485

Modbus: 9600bps or 19200bps, No Parity

Max loop resistance: 700 ohm

Fault/Alarm Output: Two dry contacts, N.O. (optional)

Enclosure: Nema 4X – Non Corrosive
- Polycarbonate enclosure: ACC-CLMT-Ax
- Stainless Steel Enclosure: ACC-CLMT-Bx

Programming: Local buttons for configuring.

Sensor Ranges:

Temperature: -40° to +85° Celsius, $\pm 0.8^{\circ}\text{C}$, Resolution 0.01°C
Long term drift: < 0.04 °C/yr

Humidity: 0% to 100%, non-condensing, $\pm 1.8\%$, Resolution 0.7%
Long term drift: < 0.5 %RH/yr

Pressure: 300 to 2000 millibar, $\pm 1.5\text{mbar}$, Resolution 0.1 mbar
Long term stability: -1 mbar/yr

Calculated Variables:

Wet bulb
Dew Point
Heat index
Air Density





Section 2 – Installation

Choosing a Location

Choose a location that is not excessively wet. The probe end of the Climatrax is not water proof.

Wiring the Unit

Open the cover to reveal the terminal blocks.

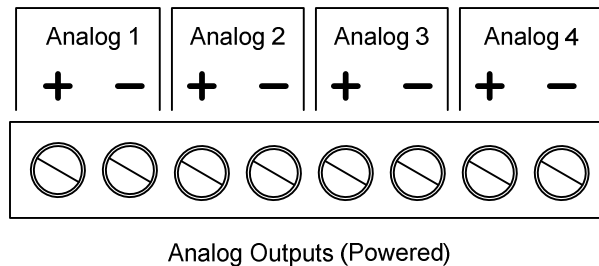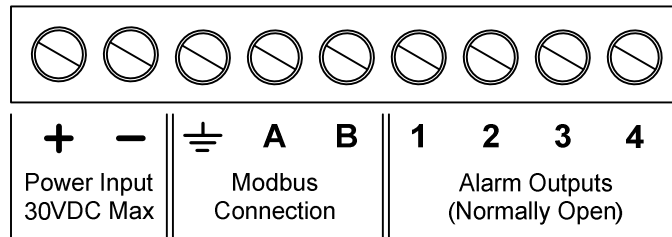

Power input: Apply 12VDC to 30VDC between + & -.

Modbus: A is non-inverting input & B is inverting input, Ground is cable shield connection.

Alarm Outputs (optional): Two dry contacts, one between 1&2, and the other between 3&4.

The four 4-20mA outputs are self powered. Scaling of each channel can be set in the menu, along with changing the process variable for that specific channel.

Analog 1 by default represents Temperature.

Analog 2 by default represents Humidity.


Analog 3 by default represents Pressure.

Analog 4 by default represents Wet Bulb Temperature.



Section 3 – Programming

Description of Buttons

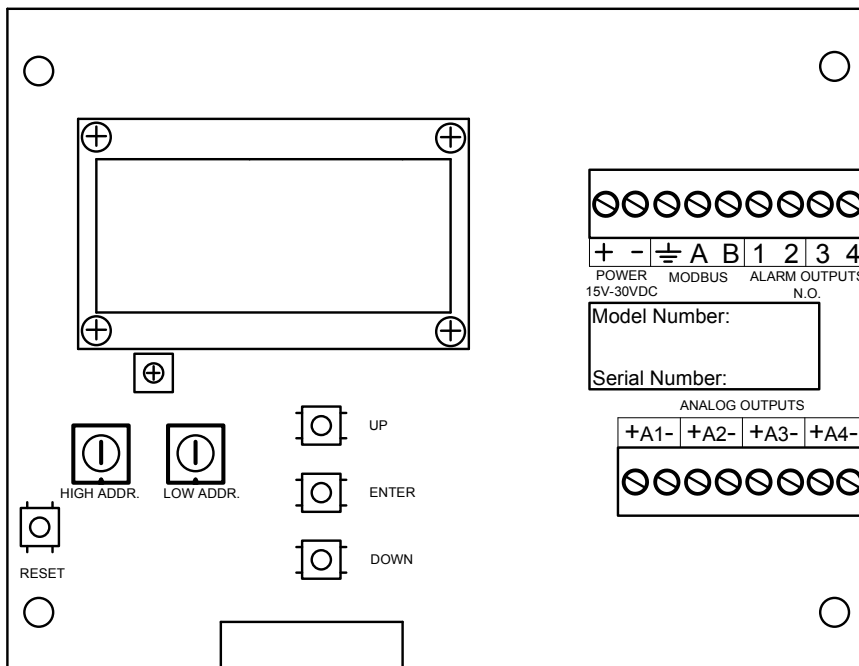

ENTER = Enter Menu mode, accept selection, select next digit.

UP & DOWN = Scroll up or down, change selected digit.


RESET = Reboots the CPU. Does not reset the settings.

HIGH ADDR. = Sets Modbus Address, See section 4.

LOW ADDR. = Sets Modbus Address, See section 4.



Climatrax Menu Flow Chart

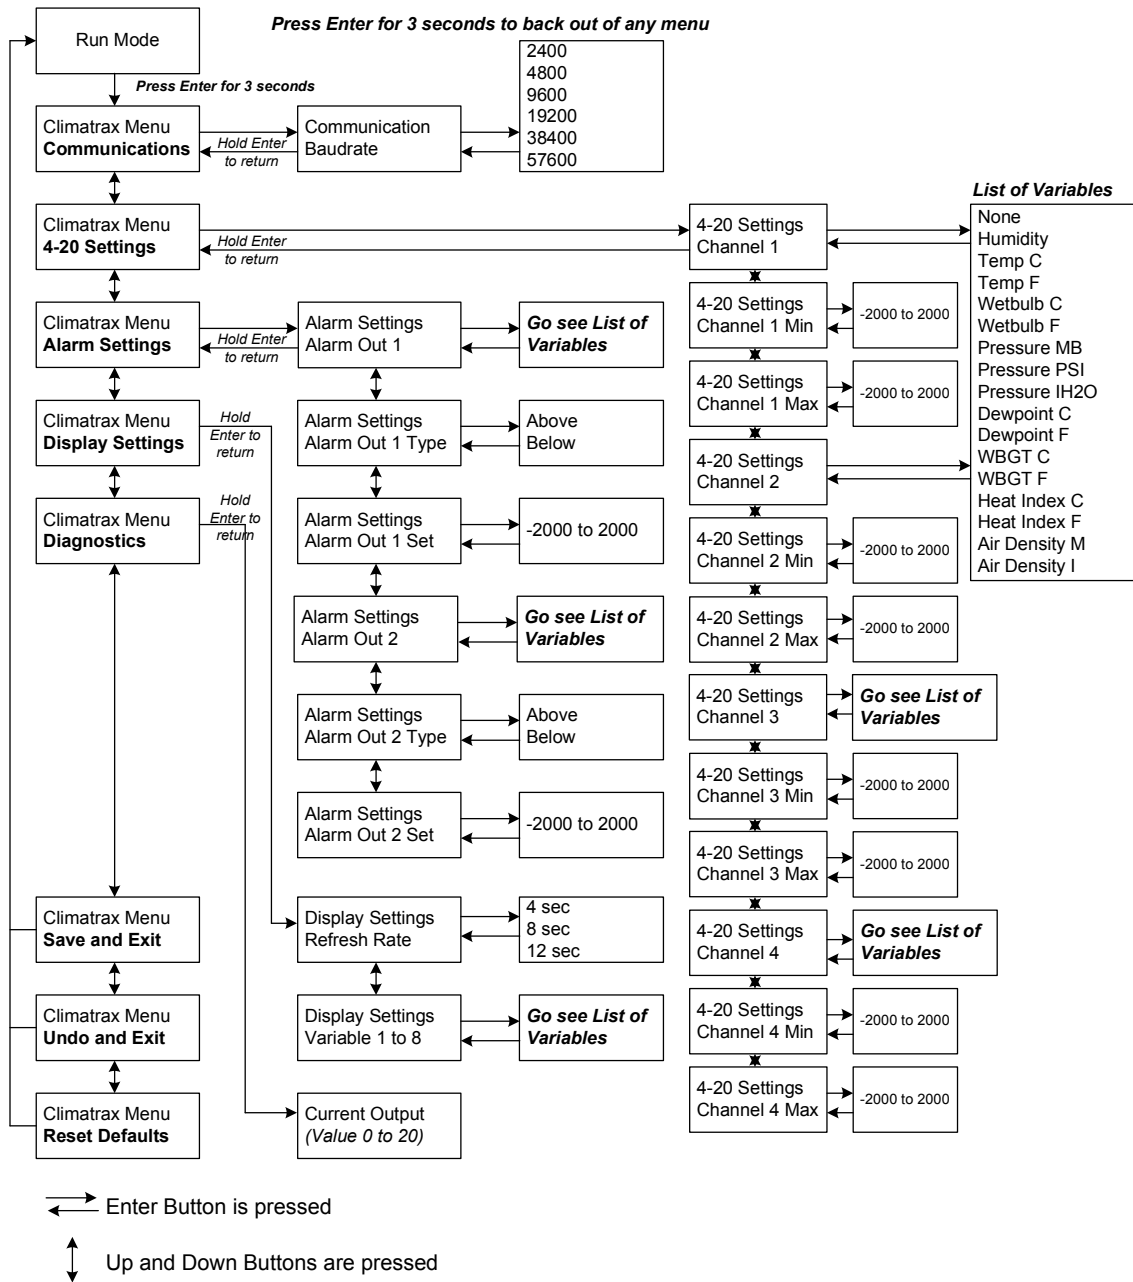



Flow Chart Description/Information

Communications: Baudrate is chosen in this menu, default is 9600. Unit must be reset for new baudrate to take effect. Parity is always set to None.

4-20 Settings: This menu allows the user to change the span of the variables in regard to the 4-20mA signal associated with it. It also allows the user to select what process variable they would like to use for the four analog outputs.

Min: This value will represent 4mA

Max: This value will represent 20mA

Default Settings for Analog output Variables:

Default Variable		Default Span Setting	Maximum Span Setting
Chan. 1	Humidity	0 – 100%	0 – 100%
Chan. 2	Temperature C	-40 – 125 °C	-40 – 125 °C
Chan. 3	Pressure mBar	900 – 1100 millibar	0 – 5000 millibar
Chan. 4	Heat Index C	-40 – 125 °C	-40 – 125 °C

Variables/Process: There are sixteen different process variables that can be selected and measured by the Climatrax:

Variable	Range	Units of Measure
Humidity	0 – 100	%RH
Temp C	- 40 – +85	°C
Temp F	- 40 – +185	°F
Wet bulb C	- 40 – +125	°C
Wet bulb F	- 40 – +185	°F
Pressure mBar	300 – 2000	millibar
Pressure PSI	4.3 – 29	PSI
Pressure IH2O	120.3 – 802.6	inches of water
Dew point C	- 40 – +85	°C
Dew point F	- 40 – +185	°F
WBGT1	- 40 – +85	°C
WBGT2	- 40 – +185	°F
Heat Index C	- 40 – +85	°C
Heat Index F	- 40 – +185	°F
Air Density		Kg/m ³
Air Density		lbs/ft ³



Alarm Settings: There are two alarms associated with the Climatrax Unit. This menu allows the user to select a maximum of two variables and associate a setpoint with those variables. If the reading is either above or below the setpoint depending on the desired settings an alarm will be activated.

Setpoint: A desired setpoint can be entered in this section, this value is one that is selected to ensure the user is notified if the particular variable/process exceeds or is less than the desired setpoint.

Type: This section allows the user to select whether the alarm will react to the variable/process when it is above or below the setpoint entered.

Diagnostics: Diagnostics allow you to force all the 4-20mA outputs at the same time. Using up and down sets the outputs to what is displayed on the LCD.

Save and Exit: Allows the user to save all the changes and return to Run mode.

Undo and Exit: Allows the user to undo any changes without saving and returns them to Run mode.


Reset Defaults: Reset the unit to factory set defaults. The unit will go back into Run mode once this is selected.

Note: To change values in the menu press enter on the setting you want to change Use Up or Down to change the number, press Enter to switch to the next digit.




Section 4 – MODBUS

Wiring Modbus

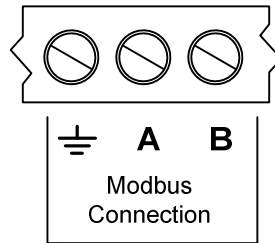

A and B are for connecting to your MODBUS network, and ground is supplied for cable shielding. A is non-inverting and B is inverting.

Setting Modbus Address

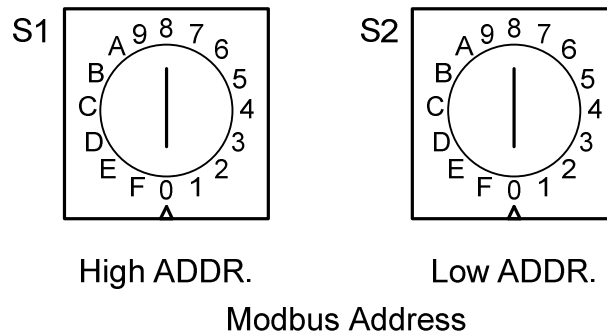

The Modbus Address is displayed during boot up on the Climatrax. The Modbus Address can be set to 1 through 255 using the hexadecimal switches above. Refer to the table on the page 12.



S1	S2	Modbus Address	S1	S2	Modbus Address	S1	S2	Modbus Address
0	0	0	1	0	16	2	0	32
0	1	1	1	1	17	2	1	33
0	2	2	1	2	18	2	2	34
0	3	3	1	3	19	2	3	35
0	4	4	1	4	20	2	4	36
0	5	5	1	5	21	2	5	37
0	6	6	1	6	22	2	6	38
0	7	7	1	7	23	2	7	39
0	8	8	1	8	24	2	8	40
0	9	9	1	9	25	2	9	41
0	A	10	1	A	26	2	A	42
0	B	11	1	B	27	2	B	43
0	C	12	1	C	28	2	C	44
0	D	13	1	D	29	2	D	45
0	E	14	1	E	30	2	E	46
0	F	15	1	F	31	F	F	255



MODBUS Registers

Process Variables – Read-Only

REGISTER	READING	TYPE	MULTIPLIER
40001 & 40002	Relative Humidity %	Float32	
40003 & 40004	Temperature C	Float32	
40005 & 40006	Temperature F	Float32	
40007 & 40008	Wetbulb C	Float32	
40009 & 40010	Wetbulb F	Float32	
40011 & 40012	Pressure MB	Float32	
40013 & 40014	Pressure PSI	Float32	
40015 & 40016	Pressure IH2O	Float32	
40017 & 40018	Dewpoint C	Float32	
40019 & 40020	Dewpoint F	Float32	
40021 & 40022	WBGT C	Float32	
40023 & 40024	WBGT F	Float32	
40025 & 40026	Heat Index C	Float32	
40027 & 40028	Heat Index F	Float32	
40029 & 40030	Air Density (Metric)	Float32	
40031 & 40032	Air Density (Imperial)	Float32	

40033	Alarm1	UInt16	
40034	Alarm2	UInt16	

40035	Relative Humidity %	Int16	100
40036	Temperature C	Int16	100
40037	Temperature F	Int16	100
40038	Wetbulb C	Int16	100
40039	Wetbulb F	Int16	100
40040	Pressure MB	UInt16	10
40041	Pressure PSI	UInt16	100
40042	Pressure IH2O	UInt16	10
40043	Dewpoint C	Int16	100
40044	Dewpoint F	Int16	100
40045	WBGT C	Int16	100
40046	WBGT F	Int16	100
40047	Heat Index C	Int16	100
40048	Heat Index F	Int16	100
40049	Air Density (Metric)	Int16	100
40050	Air Density (Imperial)	Int16	100



Section 5 – Troubleshooting

FAQ (Frequently Asked Questions)

A) Why am I not seeing anything on the display?

- Check power connections. When the instrument is powered on, it should read “Accutron Instruments” followed by the code version before entering run mode.
- Ensure that the Climatrax was not damaged in any way during shipping. If this is the case, please contact your supplier.

B) The Climatrax is displaying Error: CRC Fail, Cannot Connect.

- This means the Climatrax is not able to communicate with the probe.
- Make sure the probe has not been damaged.
- Check the connections inside to ensure the wires are not damaged or disconnected.

C) Modbus is not working.

- Check that the Modbus address has been set correctly. Use table 1 to help set the address. The currently set Modbus address is displayed when the instrument is powered on.
- Try reversing the connections on A and B.

D) The Climatrax display is constantly looping through displaying “Accutron Instruments” & version number.

- This means the Climatrax is not able to communicate with the probe.
- Make sure the probe has not been damaged.
- Check the connections inside to ensure the wires are not damaged or disconnected.




Appendix A

Glossary

Dew1:	Dew Point in degrees Celsius
Dew2:	Dew Point in degrees Fahrenheit
Heat1:	Heat index in Celsius
Heat2:	Heat index in Fahrenheit
Humidity:	Relative Humidity %
mbar:	Millibar
Temp1:	Temperature in degrees Celsius
Temp2:	Temperature in degrees Fahrenheit
Wetbulb1:	Wet Bulb Temperature in degrees Celsius
Wetbulb2:	Wet Bulb Temperature in degrees Fahrenheit
WBGT1:	Wet Bulb Globe Temperature in degrees Celsius
WBGT2:	Wet Bulb Globe Temperature in degrees Fahrenheit
AirD1:	Air density in kilograms per cubic meter
AirD2:	Air density in pounds per cubic foot



Appendix B – Diagrams

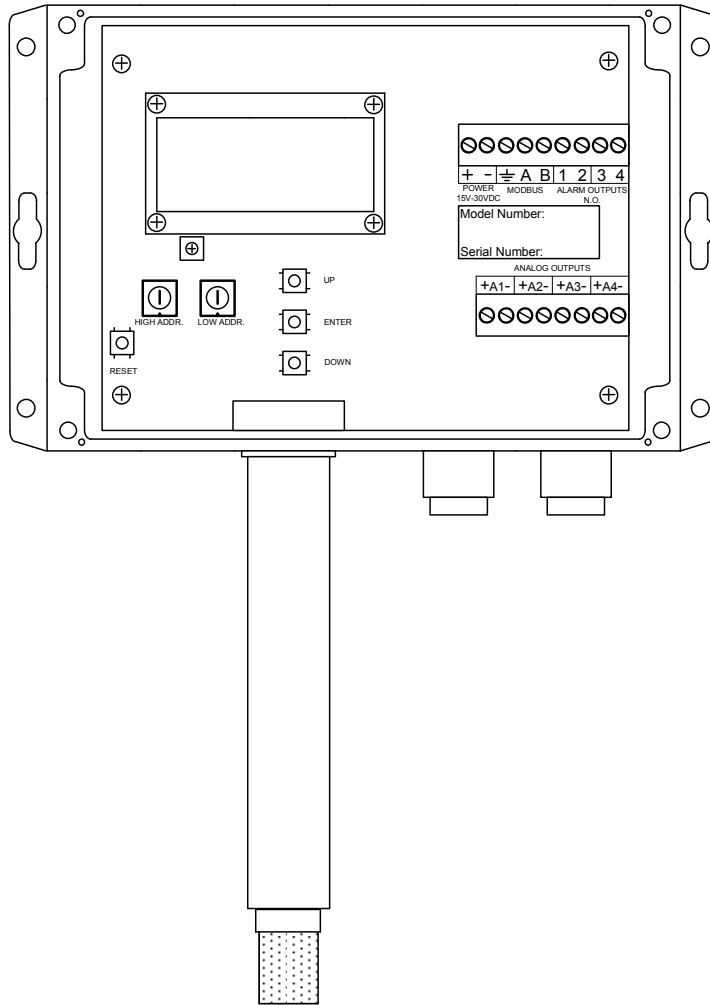

1 inch = _____


Internal Diagram: Polycarbonate Enclosure


Accutron Instruments Inc


July 09, 2012

Climatrax Diagrams

1 of 4

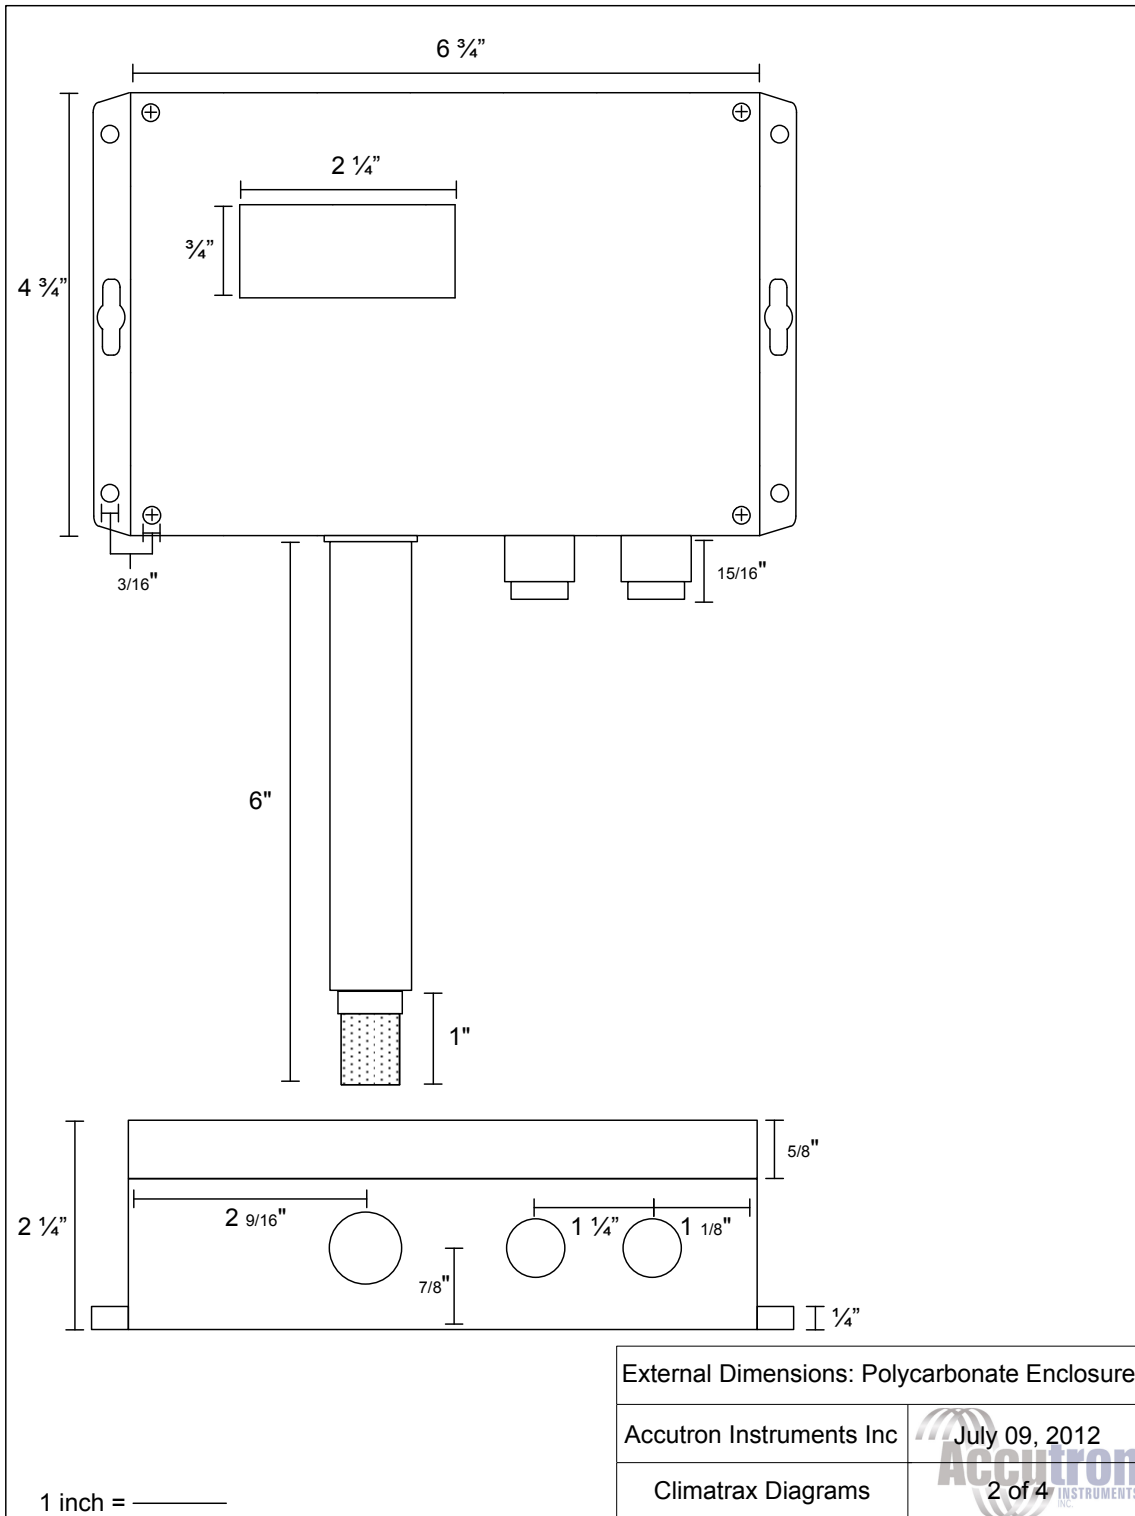

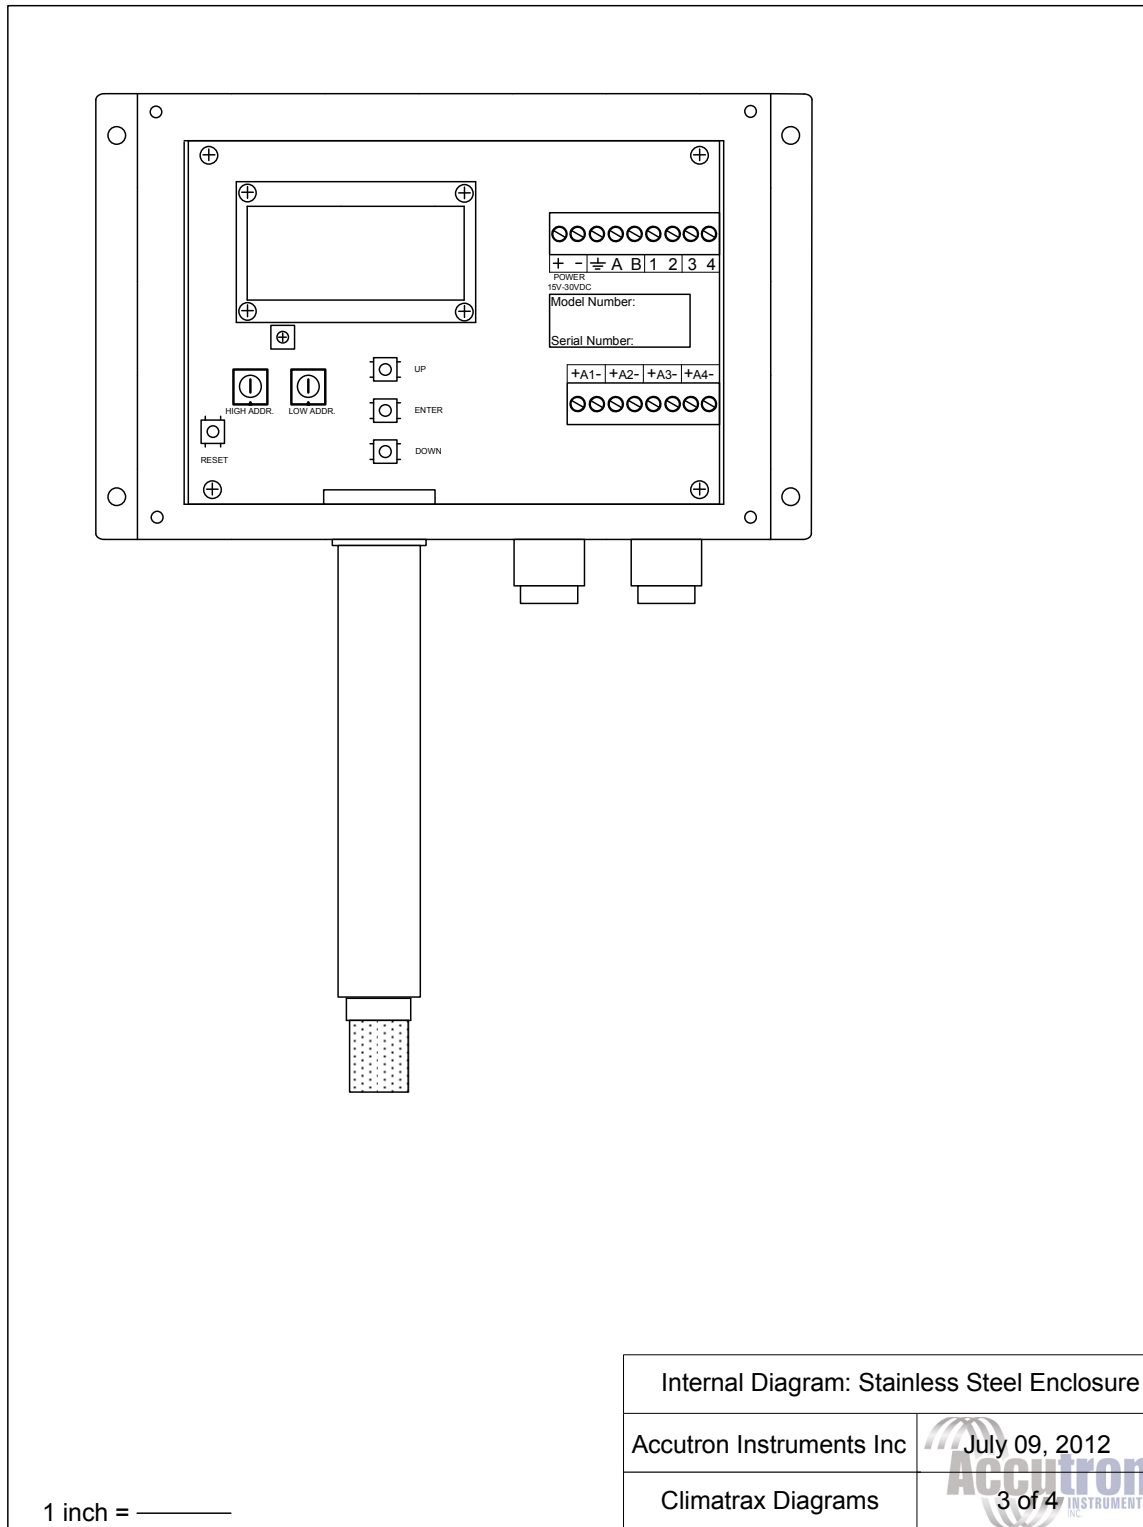

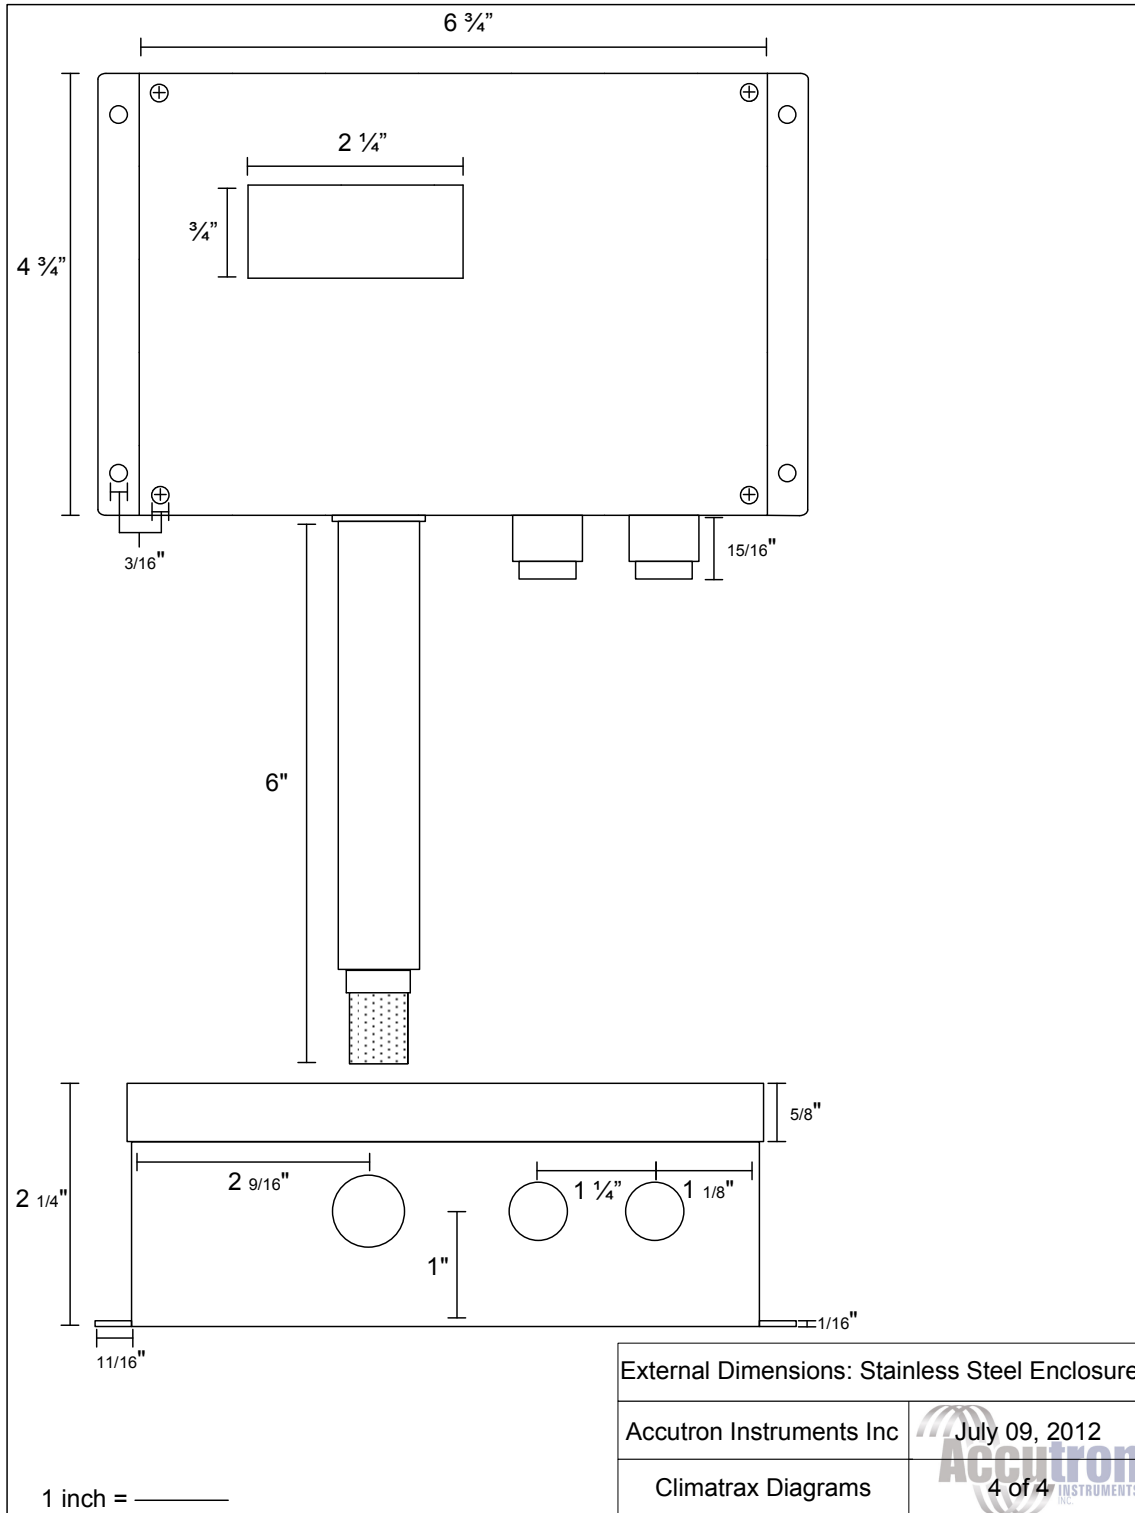



Accutron Climatrax Part Number Creator

ACC-CLMT-

X	X
---	---

Options

- A – No Relay Module
- B – Relay Module, 2 Outputs

Enclosure

- A – Polycarbonate Enclosure
- B – Stainless Steel Enclosure

Replacement Part Numbers

ACC-CLMT-SCR01: Probe Filter

ACC-CLMT-PRBASY-P: Replacement polycarbonate probe with filter

ACC-CLMT-PRBASY-S: Replacement Stainless steel probe with filter



Sensor Information

Relative Humidity:

Response Time: 8 seconds

Hysteresis: $\pm 1\%RH$

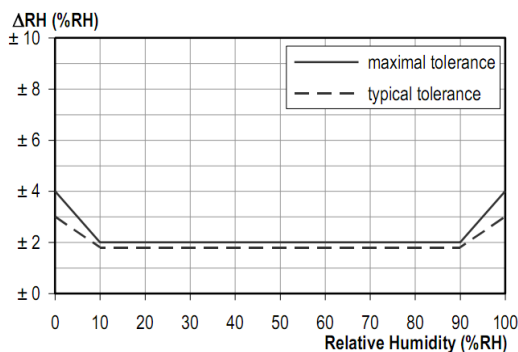


Figure 2 Typical and maximal tolerance at 25°C for relative humidity.

1.2 RH accuracy at various temperatures

Maximal tolerance for RH accuracy at 25°C is defined in Figure 2. For other temperatures maximal tolerance has been evaluated to be within limits displayed in Figure 5.

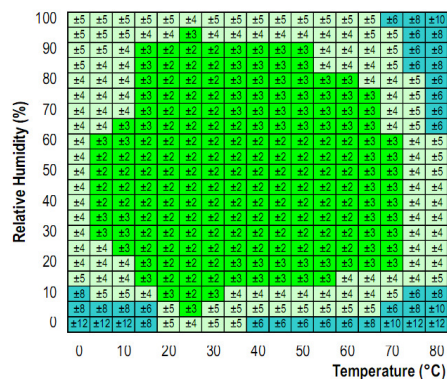


Figure 5 Maximal tolerance of relative humidity measurements given in %RH for temperatures 0 – 80°C.

Temperature:

Response Time: 5 seconds

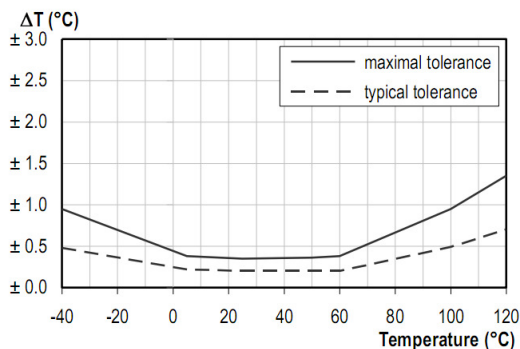


Figure 3 Maximal tolerance for temperature sensor in °C.

Pressure:

Response Time: 8.22 milliseconds

Parameter	Conditions	Min	Max	Unit
Absolute Accuracy	at 25°C, 700..1100 mbar	-0.5	0.5	mbar
	at 0..50°C, 300..1100 mbar	-1	1	mbar
	at -20..85°C, 300..1100 mbar	-2.5	2.5	mbar
	at -40..85°C, 300..1100 mbar	-5	5	mbar